



OXFORD, ENGLAND

EVO SPEC™ HELMET SAFETY SPECTACLES



www.jsp.co.uk

Use a SmartPhone
to scan the QR code to
view instruction video, or
visit: <http://bit.ly/EvoSpecFit>





EVO SPEC™ - HELMET SAFETY SPECTACLES



GB

1. Place the helmet inside facing upward and the EVO Spec™ nose bridge upward with arms pointing towards the helmet. 2. Locate the fitting pin on the outside of the EVO Spec™ arm. 3. Locate the fitting pin on the inside of the helmet. 4. Firmly push the fitting pin into the first hole on the centre webbing clip. 5. Make sure that the arm is securely connected and then repeat the process with the opposite arm. 6. Push the Spectacle inside the helmet until the clips on the outer edges 'click' into place behind the receiving notches on the helmet. 7. To deploy the EVO Spec™ whilst wearing the helmet pull the peak forward, then pull the spectacle element down over the eyes into a comfortable position.



JSP Ltd, Worsham Mill, Minster Lovell Oxfordshire, OX29 0TA
TECHNICAL HELPLINE: +44(0)2002 826051
email: technical.service@jsp.co.uk



BSI (NB 0086): BSI, Kitemark House, Maylands Avenue,
Hemel Hempstead, Hertfordshire, HP2 4SQ, United Kingdom



ISSUE: 01/12

RFAZ-006-900



EVO SPEC™ SKYDDSGLASÖGON TILL HJÄLM



SE

1. Placera hjälmen med insidan vänd uppåt och näsbyggnan på EVO Spec™ uppåt med armarna pekande mot hjälmen. 2. Lokalisera det första hålet (räknat från hjälmens front) på det elastiska bandets klämma i mitten. 3. Lokalisera passlufvet på utsidan av EVO Spec™-armen. 4. Tryck in armen sitter säkert och utgöra därefter samma procedur med armen på den motsatta sidan. 5. Skjut in glasögonen i hjälmen tills klämmorna på de yttre kantzarna 'klickar' på plats bakom de mottagande skarorna på hjälmen. 7. För att använda EVO Spec™ när hjälmen bärs på huvudet, dra glasöngödeln framåt och ned över ögonen till ett bekvämt läge.



JSP Ltd, Worsham Mill, Minster Lovell Oxfordshire, OX29 0TA
TECHNICAL HELPLINE: +44(0)2002 826051
email: technical.service@jsp.co.uk




BSI (NB 0086): BSI, Kitemark House, Maylands Avenue,
Hemel Hempstead, Hertfordshire, HP2 4SQ, United Kingdom



ISSUE: 01/12

RFAZ-006-900

EVOSPEC™

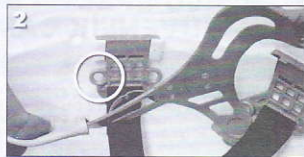

JSP Ltd, Worsham Mill, Minster Lovell Oxfordshire, OX29 0TA
TECHNICAL HELPLINE: +44(0)2002 826051
email: technical.service@jsp.co.uk



BSI (NB 0086): BSI, Kitemark House, Maylands Avenue,
Hemel Hempstead, Hertfordshire, HP2 4SQ, United Kingdom



ISSUE: 01/12

RFAZ-006-900